


3-5. Using the interior lights

Interior lights list

Illuminated entry system: The various lights automatically turn on/off according to the presence of the electronic key, whether the doors are locked/unlocked, whether the doors are open/closed, and the engine switch mode.

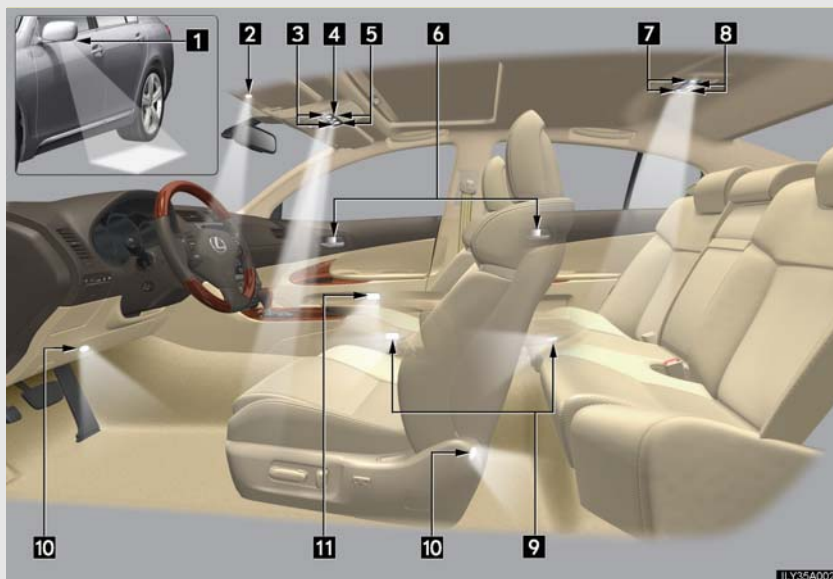

- 1 Outer foot light
- 2 Steering spot light
- 3 Front personal lights (→P. 308)
- 4 Shift lever light
- 5 Front interior lights (→P. 308)

- 6 Inside door handle lights
- 7 Rear personal lights (→P. 308)
- 8 Rear interior lights
- 9 Door courtesy lights
- 10 Foot light
- 11 Front scuff light

When the instrument panel light control switch is turned to minimum, the foot lights, inside door handle lights and shift lever light will turn off. (→P. 107)

n **To prevent battery discharge**

If the interior lights, personal lights and steering spot light remain ON when the door is not fully closed or the interior light switch in "DOOR" position, the lights will go off automatically after 20 minutes.

n **Customization**

Setting (e.g. The time elapsed before lights turn off) can be changed. (→P. 526)

3-5. Using the interior lights

Interior lights



- 1 "ON"
- 2 "OFF"
- 3 "DOOR"

The interior lights are turned on/off by the illuminated entry system.

Personal lights


► Front



- 1 ON/OFF

3-5. Using the interior lights

► Rear

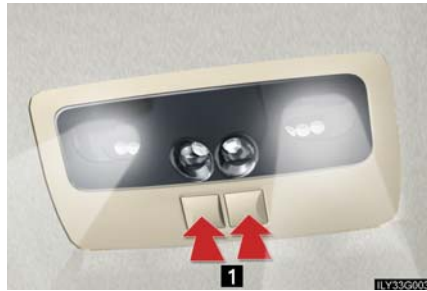

1 ON/OFF

n Customization

Settings can be changed. (→P. 526)

3

Interior features